




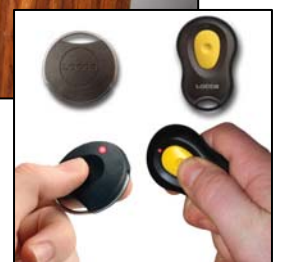

**Quick Overview of Electric Strike
Installation for "Access" or "Multi"
Wireless Remote Systems**

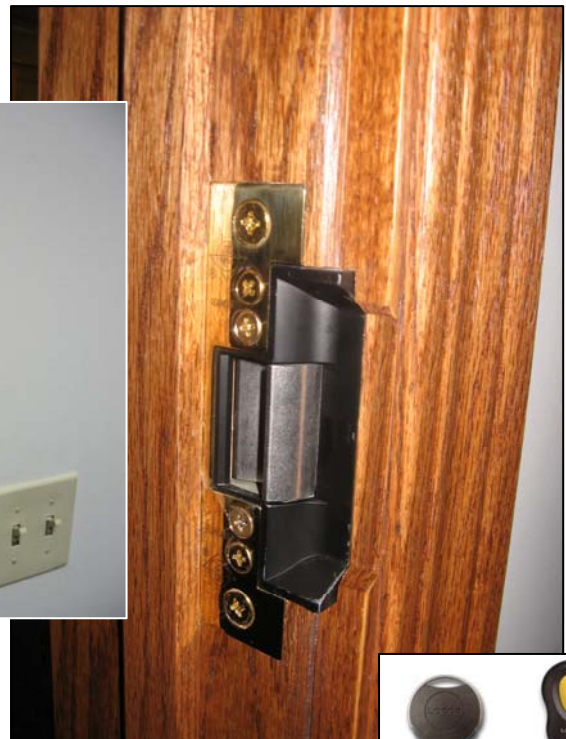

Remove existing strike plate, drill and/or chisel enough of frame and trim to accept the electric strike and strike cover plate. Connect the electric strike wires to the Amesbury LoCCA control box, using the quick connect tabs and then plug it in. (The control box can be mounted anywhere...hidden in a closet, or wherever you want it.)

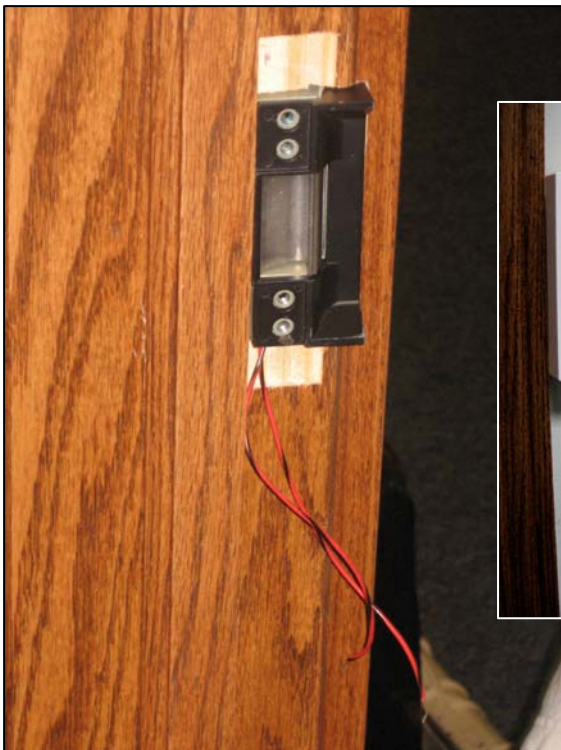

I chose to hide the plug-in cord behind the trim for this one, since I placed the control box in plain view. Now, two presses of the master remote, and 2 presses of your own remote and you are ready to unlock the door, no knobs, no keys, just press your **NEW WIRELESS REMOTE** and push the door open! Congratulations, you did it!